



HOW TO MEASURE A SKYLIGHT

sales@skylightsovertexas.com

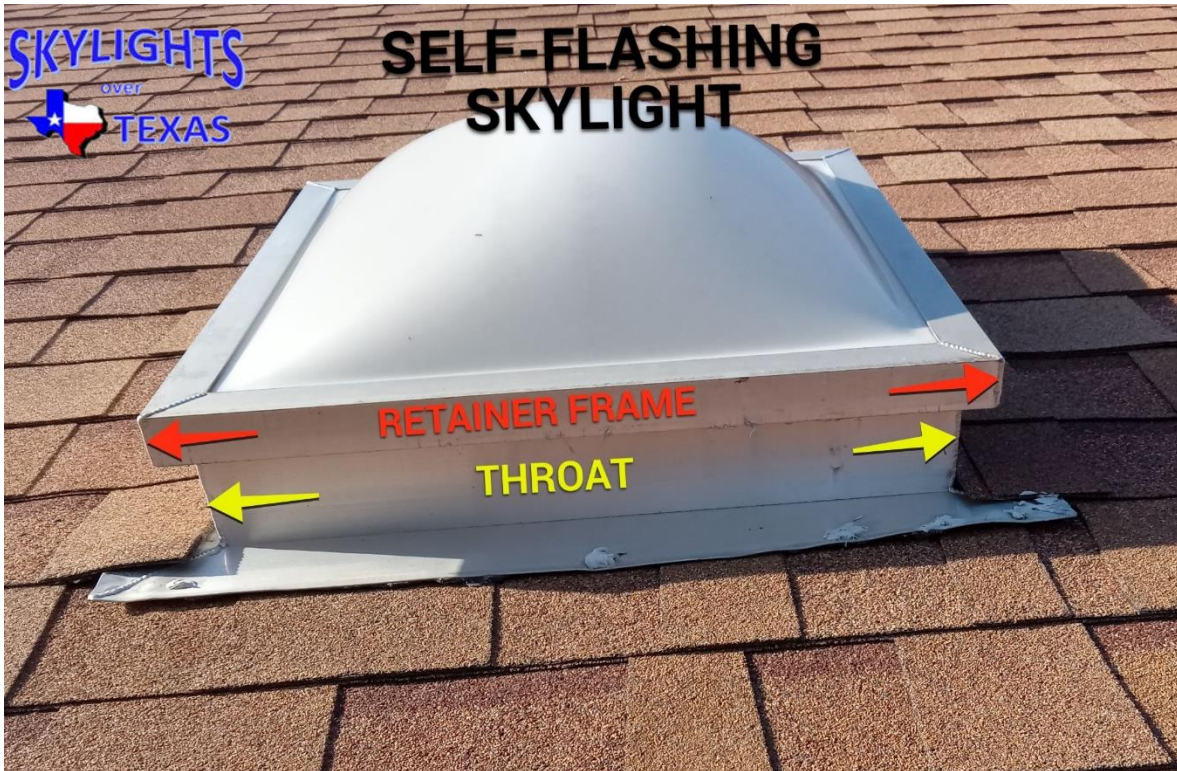

Full Self-Flashing Skylight Replacement – Measure the throat/rough opening.

Replace Domes Only – Measure retainer frame. We will take off a ½" for the dome size.

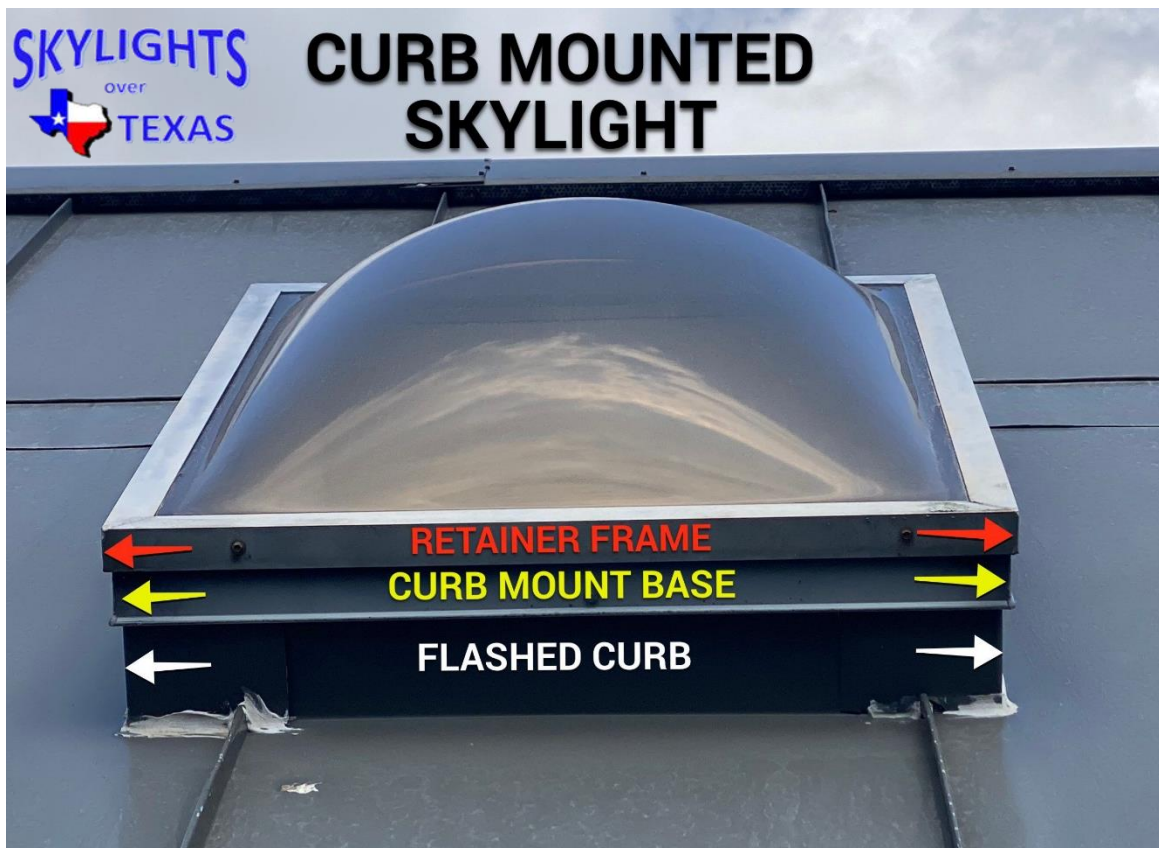

Full Curb-Mount Skylight Replacement – Measure the flashed curb. We will add a ½" for skylight clearance. Or measure the curb mount base.

Replace Domes Only – Measure retainer frame. We will take off a ½" for the dome size.